


Fulkrum
models: P079 YF B23 V
P069 YF B23 V
P068 YF B23 V
P067 YF B23 V

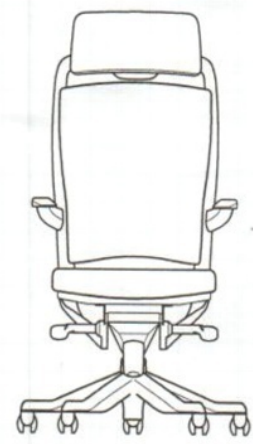

User
Instructions

- A Seat Height Adjustment**
Flip up lever on right-side to raise or lower set. Adjust such that your feet are adequately supported on floor.
- B Multi-Position Tilt Lock**
Recline to the desired position, and flip down lever on left-side to lock. Flip up lever, and recline backwards to release tilt-lock.
- C Tilt Tension Control**
Turn bottom knob clockwise to provide a stronger tilt tension, and vice-versa. Adjust such that minimum effort is required to push back when reclining.
- D Adjustable Lumbar Depth**
Turn knobs on either side of back-frame to adjust depth of lumbar-support cushion. A slack mesh-back is normal and may be tensioned by adjusting the cushion forwards.
- E Adjustable Arm-pads**
Arm-pads can be repositioned to front or back, and swivelled into desired position.

- F Adjustable Headrest Height (P079 and P069 models only)**
Hold head-rest by both sides and pull up or push down to the desired height.

Fulkrum
models: P079 YF B23 V
P069 YF B23 V
P068 YF B23 V
P067 YF B23 V

