

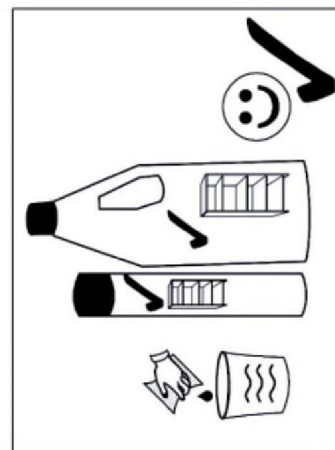
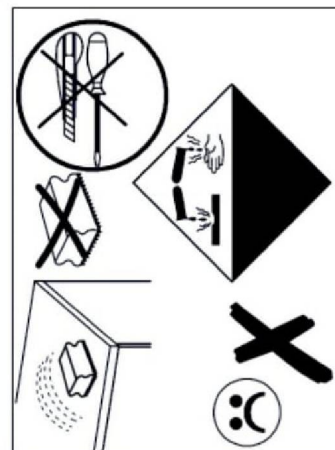
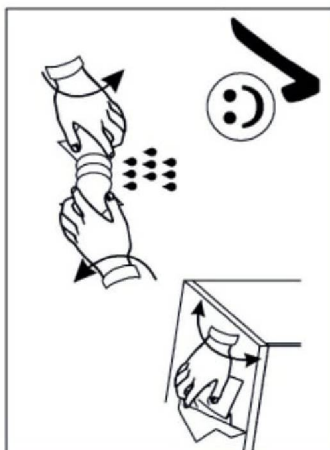
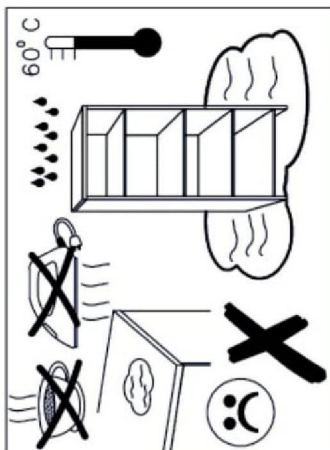
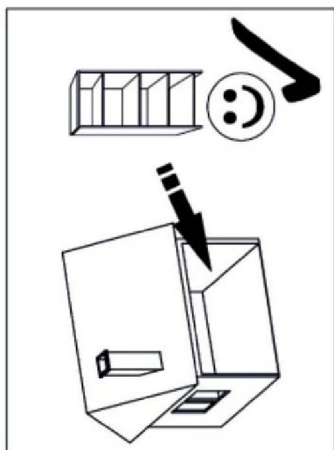
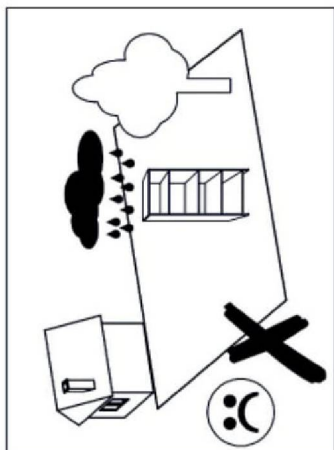




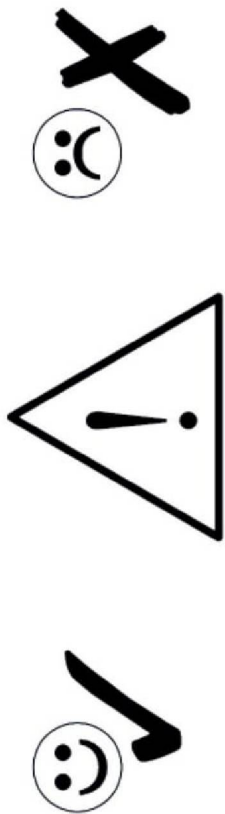


# MURCIA


(RU) Инструкция по сборке:  
 (CZ) Návod montáž:  
 (HU) Szerelési útmutató:  
 (EN) Assembly instructions:  
 (SK) Návod montáž:  
 (PL) Instrukcja montaż:

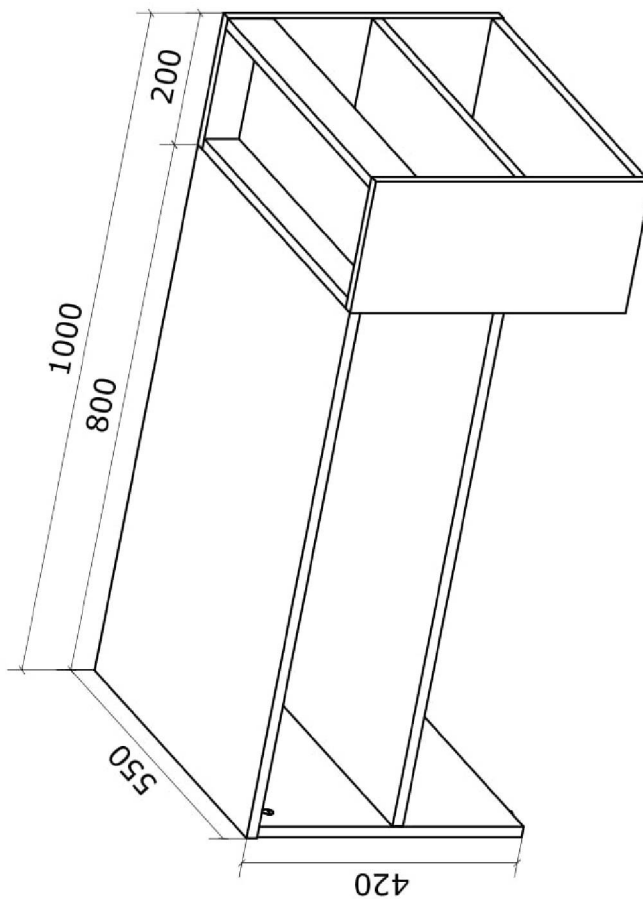

- 7**
-  **M** x 6
  -  **MZ** x 6
  -  **N** x 6

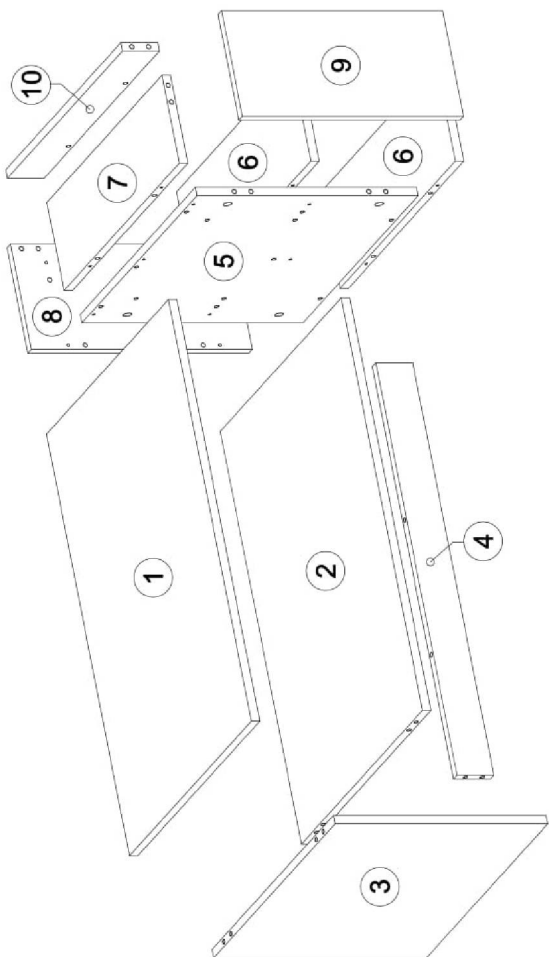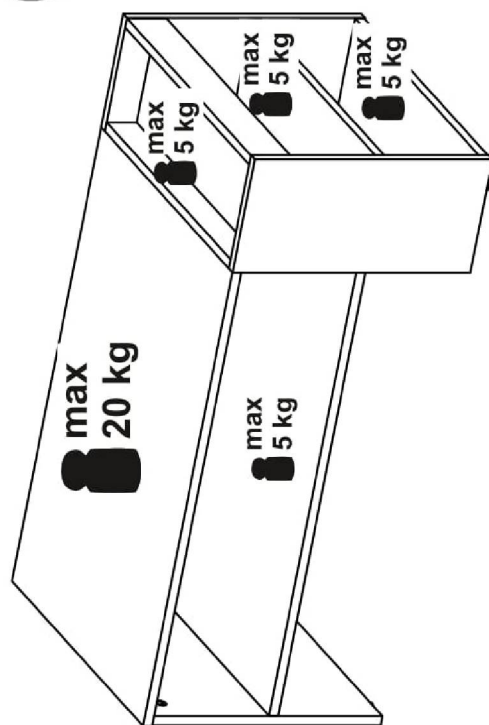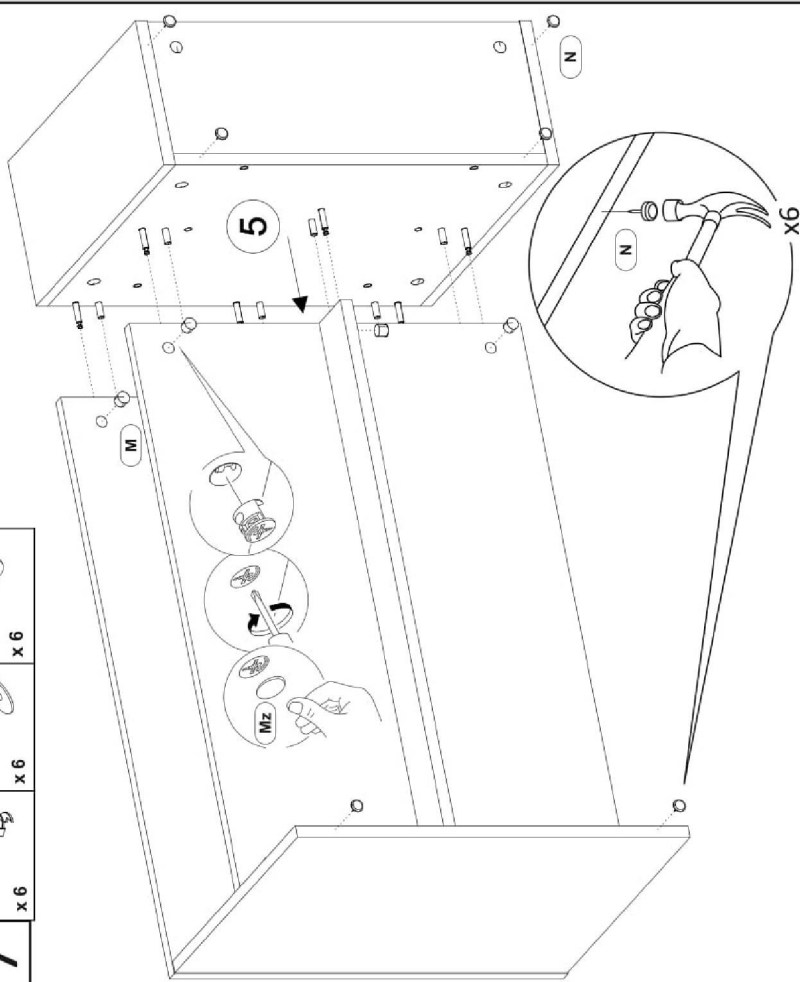

Nº	A	B	C	X
1	548	800	16	1
2	544	783	16	1
3	546	404	16	1
4	783	70	16	1
5	420	518	16	1
6	518	183	16	2
7	518	167	16	1
8	420	200	16	1
9	420	200	16	1
10	518	70	16	1

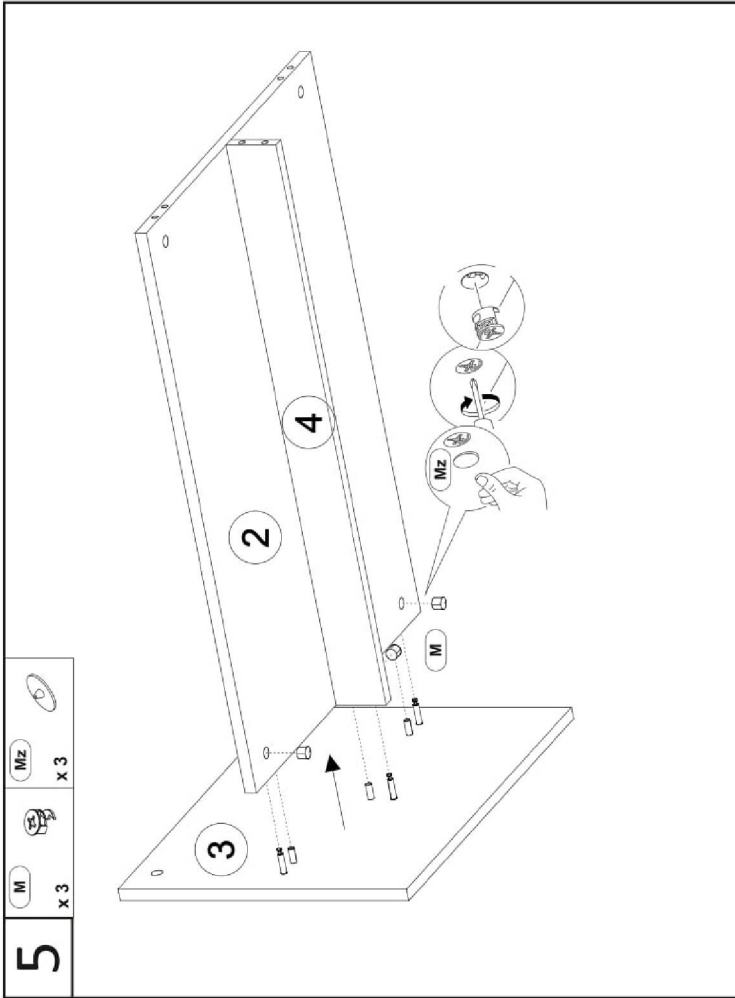

I	8x30	M	SS	MB	Mz	Kz
x 35	x 21	x 21	x 21	x 21	x 21	x 4
N	KK					
x 6	x 1					

