


WAU/WAU 2


ASSEMBLY INSTRUCTION

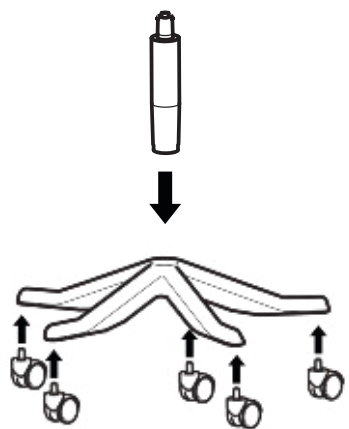


1



2

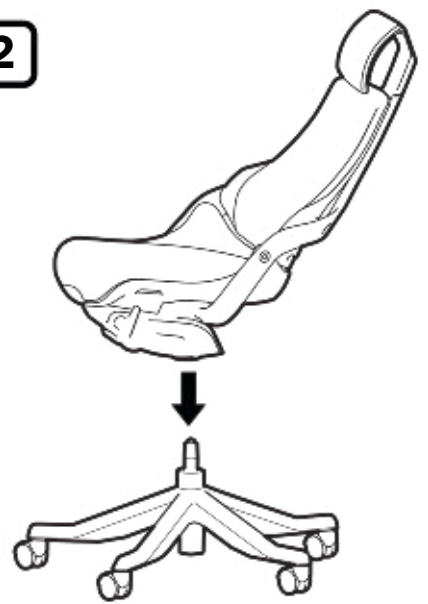


3

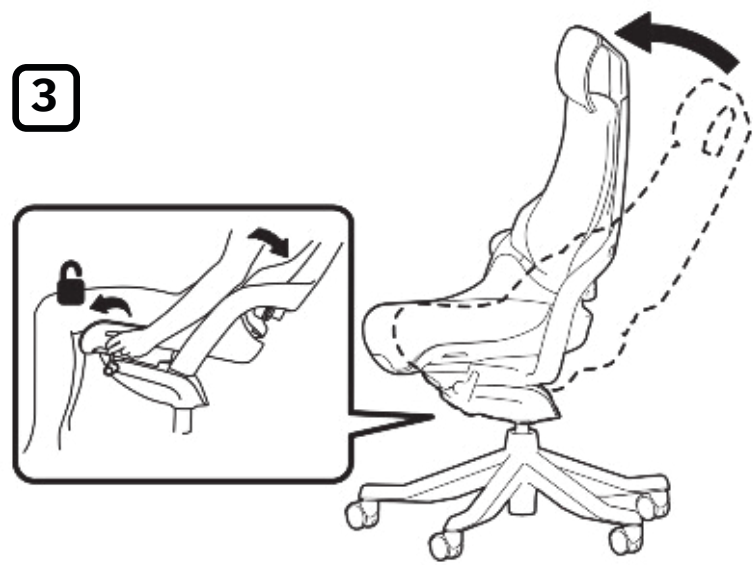


Flip the lefthand lever and depress on backrest to unlock backrest to upright position. Chair is ready for use if no armrest is required. If armrest is desired, continue below.

4

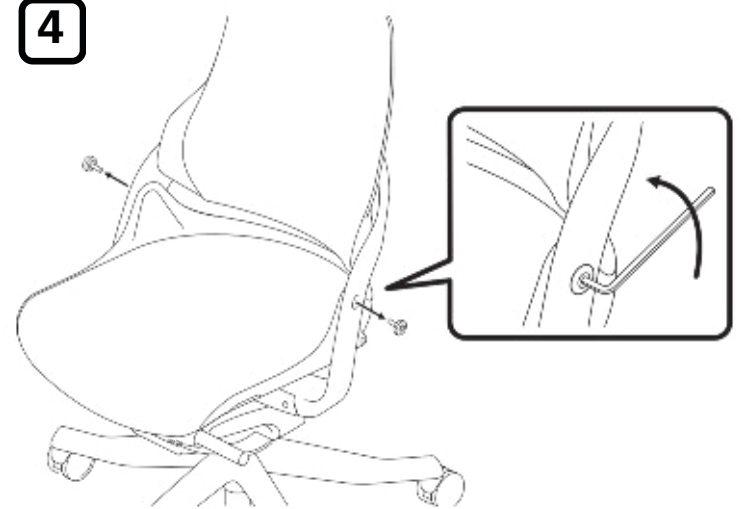

5

M6 x 45
M6 x 30

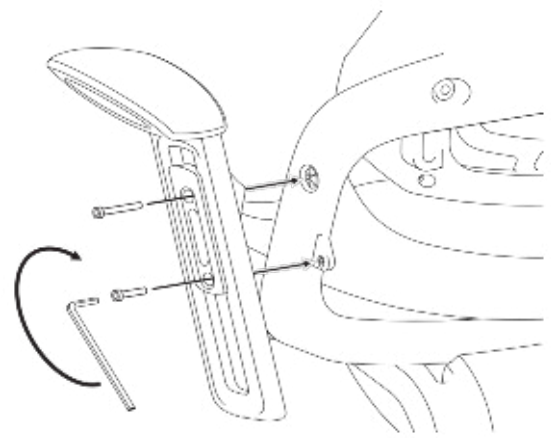

6

M6 x 45
M6 x 30

